


# AERATRON

## Ceiling Spacer Instruction



**IMPORTANT** – The purpose of the Ceiling Spacer is to space the Hanger bracket from the Ceiling, generally recommended for Soft Ceiling and up to 5 degrees Raked ceiling installation.

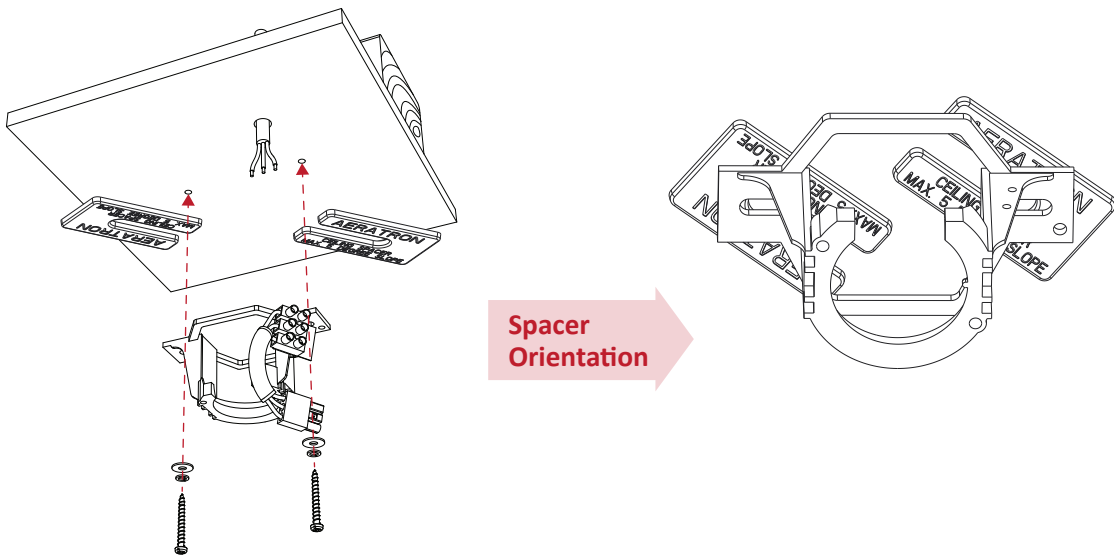

Insert the two Ceiling Spacers between the Hanger Bracket and the Ceiling, in the orientation as shown above to support the frame of the Hanger Bracket.

Spacing the Hanger Bracket from the Ceiling allows the fan to be installed to:

- A.** Install the Fan up to 5 degrees Raked ceiling. (5° angel maximum)
- B.** Soft Ceiling installation, reducing the recess pressure into the ceiling so that the Motor Housing to Ceiling clearance will be 2mm minimum.

